



Mutector™

Mutation Detection Kit

CYP 2D6

Genotyping Reagents

User Manual V1.2

Cat No. GP11

CONTENTS

Introduction	4
Overview of Mutector™ Assay	5
Materials Provided	6
Materials Required	7
Equipment Required	7
DNA Sample Preparation	8
Sequencer Setup	8
Thermal Cycling Programs	9
Mutector™ Assay Protocol	10
A. PCR Amplification	10
B. PCR Product Clean Up	13
C. STA (Genotyping) Reaction	14
D. Sample Loading	16
E. Data Analysis	16
F. Troubleshooting	17

Storage

Upon receipt of the kit, store at -20°C until use. At this temperature the reagents are stable for 6 months.

After first use, store all of reagents at $2-8^{\circ}\text{C}$ and keep them protected from direct light. At this condition the reagents are stable for 1 month.

Notice to Purchaser

The Mutector™ kit is provided as research use only, not for use in diagnostic procedures. The purchaser must determine the suitability of the product for their particular use.

TRIMGEN DISCLAIMS ALL WARRANTIES WITH RESPECT TO THIS DOCUMENT, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE FULLEST EXTENT ALLOWED BY LAW, IN NO EVENT SHALL TRIMGEN BE LIABLE, WHETHER IN CONTRACT, TORT, WARRANTY, OR UNDER ANY STATUTE OR ON ANY OTHER BASIS FOR SPECIAL, INCIDENTAL, INDIRECT, PUNITIVE, MULTIPLE OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING FROM THIS DOCUMENT, INCLUDING BUT NOT LIMITED TO THE USE THEREOF, WHETHER OR NOT FORESEEABLE AND WHETHER OR NOT TRIMGEN IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Limited Product Warranty

It is imperative that the users strictly adhere to this manual. Failure to do so will void TrimGen's guarantee of this product. TrimGen Corporation makes no other warranties of any kind, expressed or implied, including without limitation, warranties of merchantability or fitness for a particular purpose.

License

The purchase of Mutector™ kit includes a limited, nonexclusive license to use the kit. This license does not grant rights to reproduce or modify the Mutector™ kit for resale, or to use the Mutector™ kit to manufacture commercial products without written approval of TrimGen Corporation. No other license, expressed, implied or by estoppels is granted.

Product Safety and Liabilities

When working with the kit reagents, always wear a lab coat, disposable gloves, and protective goggles. TrimGen Corporation shall not be liable for any direct, indirect, consequential or incidental damages arising out of the misuse, the results of use, or the inability to use this product.

Trademarks

The trademarks mentioned herein are the property of TrimGen or their respective owners.
TrimGen Corporation. All rights reserved.

Information in this document is subject to change without notice.

Introduction


CYP2D6 Mutector™ Kit is comprised of two sets of reagents to detect and differentiate nine alleles: Set A reagents are used to detect alleles *2, *3, *4, *41 and 4180G>C; Set B reagents are used to detect alleles *6, *9, *10, and *17. While the allele *2 has no functional change with normal copy numbers, the CYP2D6 activity increases when its copy number increases. Allele *5 has no peak detected in both Set A and B.

CYP2D6 Alleles and Enzyme Activity

Allele	Genotype	Activity
<i>multiple</i>	4180G>C	Allele based
CYP2D6*2	2850C>T	Normal/Increased
CYP2D6*3	2549delA	None
CYP2D6*4	1846G>A	None
CYP2D6*5	Gene deletion	None
CYP2D6*6	1707delT	None
CYP2D6*9	2915-17delAAG	Decreased
CYP2D6*10	100C>T	Decreased
CYP2D6*17	1023C>T	Decreased
CYP2D6*41	2988G>A	Decreased

* Shifted Termination Assay (STA)

Shifted Termination Assay is a proprietary technology that uses uniquely designed primers, mixtures of modified enzymes and specially synthesized nucleotides. STA technology extends primers by multiple bases to increase signal strength and fragment size, creating peaks that are easily distinguished from wild type. The enriched signals are then detected by fragment analysis.

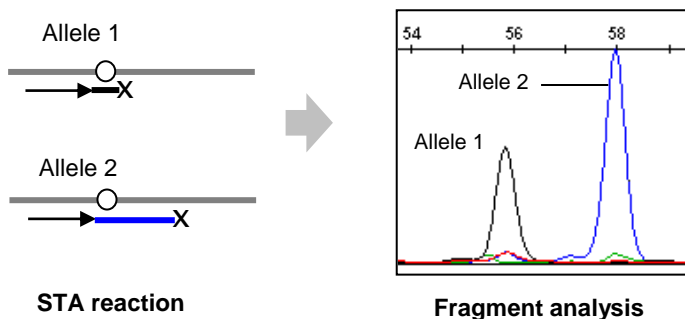

Overview of CYP2D6 Genotyping Assay

Tube A

Tube B



PCR Amplification Reaction

1.5 hours*

** Time varies by thermal cycler used*



PCR Product Clean Up

30 min



STA (genotyping) Reaction

45 min*

** Time varies by thermal cycler used*



Capillary Electrophoresis

Fragment Analysis

30-40 min

Tube -A for alleles *2, *3, *4, *41 and 4180G>C

Tube-B for alleles *6, *9, *10, and *17

Materials Provided:

The Mutector™ CYP2D6 Genotyping contains reagents for 32 tests.

Materials	GP11	Description
Master Mix	1.3 ml	PCR Reagent Mix
C-UP 1	72 µl	PCR Product Clean UP Enzyme 1
C-UP 2	72 µl	PCR Product Clean UP Enzyme 2
C-UP Buffer	780 µl	Buffer for Clean UP Enzymes
ST-F	780 µl	Reagent Mix for Allele Detection
Loading Buffer*	1.1 ml	Sample Loading Buffer with Size Standards
PCR-P A	72 µl	PCR Primers for *2, *3, *4, *41, 4180G>C
PCR-P B	72 µl	PCR Primers for *6, *9, *10, *17
DP- A*	72 µl	Detection Primers for *2, *3, *4, *41, 4180G>C
DP- B*	72 µl	Detection Primers for *6, *9, *10, *17
CTL- A	60 µl	Control DNA for *2, *3, *4, *41, 4180G>C
CTL- B	60 µl	Control DNA for *6, *9, *10, *17

* **Light sensitive:** Keep these reagents protected from direct light.

Materials required:

0.2 ml PCR tubes (8-well strip tube)

DS-32 Matrix Standard Kit for calibration of sequencer
(Applied Biosystems Pat No. 4345831)

Equipment required:

Thermal Cycler:

Any type of thermal cycler with a 0.2 ml tube block is acceptable for performing the assay.

Sequencer:

Applied Biosystems Genetic Analyzer

Instrument	Data Collection	Data Analysis
Genetic analyzer 3100	Data Collection Software v3.0 or v3.1	GeneMapper® Software v4.0 or v4.1
Genetic analyzer 3700		
Genetic analyzer 3130		
Genetic analyzer 3500	3500 Data Collection Software v1.0	GeneMapper® Software v4.1

DNA Sample Preparation:

Reagents for DNA preparation are not provided with the kit.

Any commercially available DNA extraction kit is acceptable.

DNA concentration adjustment:

When using a column or bead DNA extraction method, adjust the final concentration of extracted DNA to **100 ng/μl**.

Sequencer Setup:

First time users should set up the analysis program for the ABI sequencer (one time setup). After setup, the program can apply to all Mutector™ tests for data analysis.

Step I. GeneMapper® Setup

www.trimgen.com/docs/PartI-GeneMapper-Setup.pdf

Step II. Data Collection® Software Setup

www.trimgen.com/docs/PartII-Data-Collection-Setup.pdf

Step III. Data Analysis Using GeneMapper®

www.trimgen.com/docs/PartIII-Data-Analysis-GeneMapper.pdf



Important

Spectral calibration is required before running the test

The sequencer needs to be calibrated with the DS-32 calibration kit (Applied Biosystems cat No. 4345831). **This is a one-time calibration** to set up spectral channels to collect the test results. Refer to the DS-32 Matrix standards kit to prepare the DS-32 matrix standards. Run a Matrix Standard Set DS-32 (5FAM, JOE, NED, ROX) to perform a spectral calibration.

Thermal Cycling Programs:

Program 1 (PCR)

1 cycle	94°C 5 min
35 cycles	94°C 30 sec 53°C 30 sec 72°C 30 sec
1 cycle	72°C 5 min
	Hold at 4°C

Program 2 (PCR Product Clean-up)

	37°C 25 min
	95°C 5 min
	Hold at 4°C

Program 3 (STA Reaction)

1 cycle	94°C 4 min
20 cycles	94°C 20 sec 50°C 45 sec 70°C 20 sec
	Hold at 4°C

Mutector™ Assay Protocol:

A. PCR Amplification

Thaw all reagents and keep on ice. Spin down the reagents before use.

Negative and positive controls are recommended for each run.

§§ Tube A (alleles *2, *3, *4, *41 and 4180G>C)

A.1. Prepare PCR Reaction Mix A:

Calculate the amount of Master Mix and PCR primers using following formula.


$$\text{Master Mix} = 18 \mu\text{l} \times \left(\frac{\quad}{\text{\# of Samples/Controls}} \right) \times 1.1^* = \quad \mu\text{l}$$

$$\text{PCR-P A} = 2 \mu\text{l} \times \left(\frac{\quad}{\text{\# of Samples/Controls}} \right) \times 1.1^{**} = \quad \mu\text{l}$$

* Adjustment for pipetting error.

Label a tube with "A" and transfer the above reagents to the "A" tube and gently mix the contents (avoid bubble). This is the PCR Reaction Mix A.

A.2. Collect 0.2 ml PCR tubes, 1 tube per sample and label the tubes as shown below:

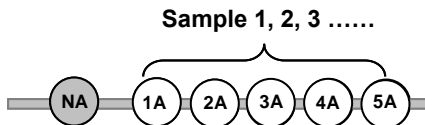

NA: Negative control

A.3. Transfer 20 μl from the tube "A" into each of the tubes.

- A.4.** Add 1 μl of nuclease free water to the “NA” tube.
- A.5.** Add 1-2 μl of sample DNA (100 ng/ μl) to each sample tube.

§§ Tube-B (Alleles *6, *9, *10, and *17)

A.6. Prepare PCR Reaction Mix B:

Calculate the amount of Master Mix and PCR primers using following formula.


$$\text{Master Mix} = 18 \mu\text{l} \times \left(\frac{\quad}{\# \text{ of Samples/Controls}} \right) \times 1.1^* = \quad \mu\text{l}$$

$$\text{PCR-P B} = 2 \mu\text{l} \times \left(\frac{\quad}{\# \text{ of Samples/Controls}} \right) \times 1.1^{**} = \quad \mu\text{l}$$

* Adjustment for pipetting error.

Label a tube with “B” and transfer the above reagents to the “B” tube, gently mix the contents (avoid bubble). This is the PCR Reaction Mix B.

- A.7.** Collect 0.2 ml PCR tubes, 1 tube per sample and label the tubes as shown below:

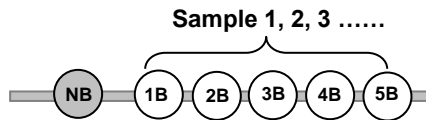

NB: Negative control

- A.8.** Transfer 20 μl each from the tube “B” into all of the tubes.
- A.9.** Add 1 μl of nuclease free water to the “NB” tube.
- A.10.** Add 1-2 μl of sample DNA (100 ng/ μl) to each sample tube.

A.11. Cap the tubes and mix the contents. After spin,
place the PCR tubes in a thermal cycler and run **Program 1**.

<u>Program 1</u>	
1 cycle	94°C 5 min
35 cycles	94°C 30 sec
	53°C 30 sec
	72°C 30 sec
1 cycle	72°C 5 min
	Hold at 4°C



The procedure can be temporarily stopped after **Program 1**.
The PCR products can be stored at 2-8°C for next day test.

B. PCR Products Clean Up

B.1. Prepare PCR Clean-Up (C-UP) Mix:

Calculate the amount of C-UP Buffer, C-UP1 and C-UP2 using following formula:

$$\text{C-UP Buffer} = 3 \mu\text{l} \times \left(\frac{\quad}{\text{\# of PCR tubes}} \right) \times 1.2^* = \quad \mu\text{l}$$

$$\text{C-UP1} = 1 \mu\text{l} \times \left(\frac{\quad}{\text{\# of PCR tubes}} \right) = \quad \mu\text{l}$$

$$\text{C-UP2} = 1 \mu\text{l} \times \left(\frac{\quad}{\text{\# of PCR samples}} \right) = \quad \mu\text{l}$$

* Adjustment for pipetting error.

Label a tube with "C-UP" and transfer the above reagents to the **C-UP** tube and gently mix the contents (avoid bubble). This is the PCR Clean-Up Mix.

B.2. After PCR reaction finished, spin the PCR tube and add 5 μl of **C-UP mix** to each tube.

B.3. Gently mix the content and spin the tubes.

B.4. Incubate the tubes in a thermal cycler using **Program 2**.

Program 2

37°C for 25 min

95°C for 5 min

Hold at 4°C



The procedure can be temporarily stopped after **Program 2**. The C-UP products can be stored at 2-8°C for next day test.

STA Reaction (Genotyping)

§§ Tube Set-A (Alleles *2, *3, *4, *41, 4180G>C)

C.1. Prepare STA Mix A (SA):

Label a tube as "SA".

Prepare "SA" mix as following:

ST-F Mix = $11 \mu\text{l} \times \left(\frac{\text{_____}}{\text{\# of C-UP tubes}} + 1^* \right) \times 1.1^{**} = \text{_____} \mu\text{l}$


DP-A = $2 \mu\text{l} \times \left(\frac{\text{_____}}{\text{\# of C-UP tubes}} + 1^* \right) \times 1.1^{**} = \text{_____} \mu\text{l}$

* For mutation controls
** Adjustment for pipetting error

Transfer the above reagents to the "SA" tube and gently mix the contents (avoid bubble). This is the STA Mix A.

C.2. Collect 0.2 ml strip tubes, one tube for each C-UP treated sample. Add an extra new tube for genotype controls and label the tube with CTL.

Tube Set-A

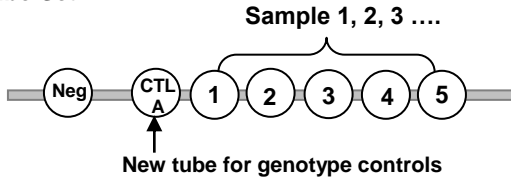

The CT- A is genotype controls designed for data analysis and should be run each time.

- C.3. Add 13 μL of "SA" into each tube of Tube Set-A.
- C.4. Add 5 μL of **2D6 CTL-A** into the **CTL-A** tube
- C.5. Transfer 5 μL of **C-UP treated PCR products** from the **Tube A** in C-UP section to each Set-A tube correspondingly.

§§ Tube Set-B (Alleles *6, *9, *10, and *17)

C.6. Prepare STA Mix B (SB):

Label a tube as "SB".

Prepare "SB" mix as following:

ST-F Mix = $11 \mu\text{l} \times \left(\frac{\quad}{\text{\# of C-UP tubes}} + 1^* \right) \times 1.1^{**} = \quad \mu\text{l}$

DP-B = $2 \mu\text{l} \times \left(\frac{\quad}{\text{\# of C-UP tubes}} + 1^* \right) \times 1.1^{**} = \quad \mu\text{l}$


* For mutation controls

** Adjustment for pipetting error

Transfer the above reagents to the "SB" tube and gently mix the contents (avoid bubble). This is the STA Mix B.

- C.7. Collect 0.2 ml strip tubes, one tube for each C-UP treated sample. **Add an extra new tube for genotype controls and label the tube with CTL.**

Tube Set-B

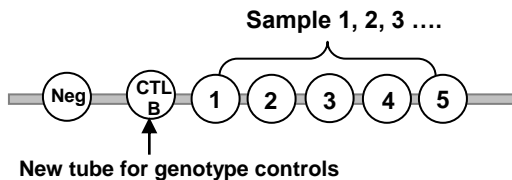

The CTL-B is genotype controls designed for data analysis and should be run each time.

- C.8.** Add **13 µL** of "**SB**" into each tube of Tube Set-B.
- C.9.** Add **5 µL** of **2D6 CTL-B** into the **CTL-B tube**
- C.10.** Transfer **5 µL** of **C-UP treated PCR products** from the **Tube B** in C-UP section to each Set-B tube correspondingly.
- C.11.** Cap the tubes, mix the contents and spin the tubes.
- C.12.** Place the tubes into the thermal cycler and perform the STA reaction using **Program 3**.

<u>Program 3</u>	
1 cycle	94°C 4 min
20 cycles	94°C 20 sec
	50°C 45 sec
	70°C 20 sec
	Hold at 4°C



The procedure can be temporarily stopped after **Program 3**. The STA products can be stored at 2-8°C overnight.

D. Sample Loading

- D.1.** Add **15 µL** of the **Loading Buffer** to each well of a sequencer adapter plate.
- D.2.** Transfer **5 µL** of the STA reaction products into each well. Confirm and remove any bubbles in the well.
- D.3.** Load the plate into the sequencer and run the pre-setup Data Collection Program.

E. Data Analysis

User can set up the allele identification method using GeneMapper (detail see GeneMapper instruction). TrimGen also provide a third party analysis software, for detail information please contact us at "inforequest@trimgen.com".